




# Popcorn Maker

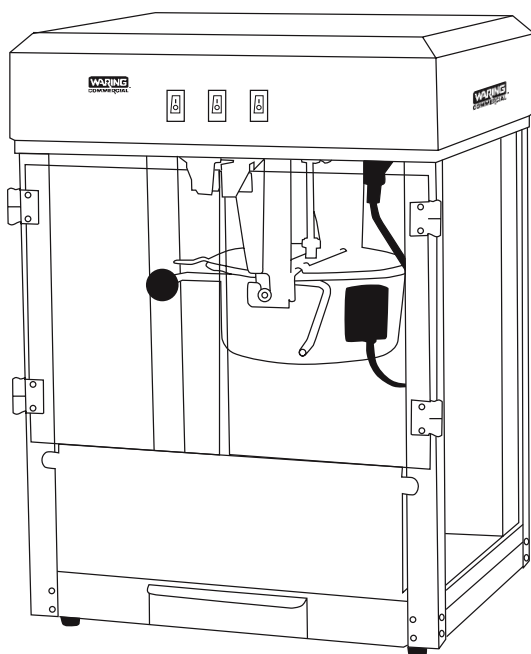

## WPM60 INSTRUCTION BOOKLET

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

# IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING.
2. Do not touch hot surfaces. Always use handles or knobs.
3. To avoid any risk of electrical shock, do not immerse cord or plug into water or other liquid.
4. This appliance should not be used by or near children, or individuals with certain disabilities.
5. Unplug main power cord from outlet while not in use and before cleaning.
6. Allow HOT parts to cool down before maneuvering.
7. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any matter. Send the unit to the nearest authorized service center for examination, repair or adjustment. (ONLY technicians should open up the unit).
8. The use of any accessories or attachments not recommended by the manufacturer may cause injury.
9. Do not pop kernels with a dry pot (without oil).
10. Do not immerse popping kettle in water.
11. Pot surface is HOT and should NOT be touched during popping or just after use.
12. Unplug, allow to cool, clean and cover the unit and store in a dry and safe place if not being used for a long time.
13. Do not let power cord hang over edge of table or counter or touch any hot surfaces.
14. Do not place the unit on or near a hot gas or electric burner or in a heated oven.
15. Extreme caution must be paid when moving the appliance containing hot oil or other hot liquids.
16. Turn ALL switches to OFF position before disconnecting power plug from the wall supply outlet.
17. Not recommended for outdoor use.
18. Do not use appliance for other than indicated usage.
19. To avoid overheating, always add oil and then kernels before operating.
20. Extreme caution must be paid when unloading popcorn. Always place the unit over a countertop so that residual hot oil or water running out will not cause burns.
21. KEEP OUT OF REACH OF CHILDREN.
22. DO NOT CLEAN USING ANY ABRASIVE MATERIAL.
23. NEVER FORCE ANY PARTS OR BRACKETS INTO POSITION.
24. NO PARTS ARE INTENDED FOR THE DISHWASHER.

## SAVE THESE INSTRUCTIONS FOR COMMERCIAL USE ONLY

**Model No. & Specifications:**

Model No: WPM60

Voltage: AC 120V~60Hz

Input Power: 1000W

Please read this user manual carefully before assembling and using.

## BEFORE FIRST USE

- With a damp cloth, wipe the kettle and internal surfaces of the popcorn maker.
- Dry thoroughly.

## ASSEMBLING

**NOTE:** Make sure the popcorn maker is unplugged before you do the following:

- Install the kettle by the pivots on the supporters, which are built into the roof of the unit.
- Connect the kettle plug to the socket located on the front right roof panel and twist to lock into place.
- Attach doors to the door frames by inserting hinge pins into the hinges on each side of the front of the unit.

## OPERATING INSTRUCTIONS

**NOTE:** All foodservice equipment should be operated by trained personnel.

1. Your Waring Commercial Popcorn Maker has 3 function switches:
  - I. Warming Light
  - II. Kettle Stirrer
  - III. Stainless Steel Kettle Heater
2. Plug the popcorn maker power cord into the wall outlet.
3. Switch on the warming light and heater (I & III), and then pour in recommended amount of oil. Recommended oil amount is  $\frac{1}{4}$  -  $\frac{1}{2}$  cup (0.6-0.8 litre).
4. Kettle should be pre-heated for 3 to 4 minutes with oil (until steam starts coming out from the kettle).
5. Measure 1 cup of popcorn kernels, open the kettle lid and pour in kernels. Salt can also be added to the mixture. Close the kettle lid.

**Caution: Lid may be hot. Use oven mitts or potholders.**
6. Switch ON the Stirrer (II) immediately to begin the popping process.
7. You can close the 2 front doors while popping (or leave them open to reduce cabinet moisture).
8. Popcorn starts popping out through the lid after about 2 to 3 minutes.
9. When popping stops, open doors, hold the red insulated kettle handle and empty the remaining popcorn from the kettle by turning counterclockwise.

**NOTE:** Additional batches of popcorn can be popped immediately.

10. Switch off the stirrer and heater (II & III) when popping is completed. The warming light (I) can remain on to display and keep popcorn warm.
11. Serve your popcorn with popcorn scoop provided.
12. Remove plug from power supply when the unit is not in use.
13. Repeat step 5 to 9 to continue popping. NOTE: Oil does not have to be preheated if popping continuously.

**CAUTION:** DO NOT LEAVE POPCORN POPPER UNATTENDED WHILE IN USE.

# CLEANING AND MAINTENANCE

1. NEVER clean any electrical unit by immersing it in water. Unplug unit and kettle and allow to cool before surface cleaning.
2. Always clean equipment thoroughly before first use. Clean unit daily using warm, soapy water, wipe clean with damp cloth and dry thoroughly. Mild cleaners and PLASTIC scouring pads may be used for cleaning purposes.
3. Unplug unit before cleaning or servicing. All service should be performed by a Waring Commercial authorized service center.
4. Never use vinegar or corrosive cleaner. Do not use chlorine-based cleaners.
5. To prevent buildup of excess oil and salt, clean daily when kettle is still warm. Allow kettle to cool down sufficiently before removing it for cleaning. Do NOT immerse kettle in water.
6. To remove grease and food splatter or condensed vapors that have baked on equipment, apply cleaners to a damp cloth or sponge and rub cleanser on the metal. Rubbing cleanser as gently as possible will not mar the finish of the stainless steel.  
**IMPORTANT:** NEVER RUB IN A CIRCULAR MOTION.
7. Remove kettle and use a mild abrasive cleaner and PLASTIC scouring pad to remove oil buildup on any of the kettle parts.
8. Remove all unpopped corn from drawer and wipe out entire cabinet. Clean cabinet and doors with mild soap and water. Dry with soft towel.

DO NOT USE ordinary steel wool as any particles left on the surface will rust.

NEVER USE a wire brush, steel or abrasive scouring pads (except stainless), scraper, file or other steel tools. Surfaces that are marred by incorrect maintenance collect dirt more rapidly and become more difficult to clean. Marring also increases the possibility of a buildup of corrosion.

NEVER USE any corrosive cleaner. Use only cleaners approved for stainless steel.

**WARNING:** Unit is not waterproof. NEVER clean any electrical unit by immersing it in water. Turn off unit before cleaning surface.

**WARNING:** SHOCK HAZARD – To avoid electrical shock, always de-energize all power to equipment before performing cleaning or maintenance.

## SERVICE

Refer to the list of Authorized Service Centers enclosed with your Waring® Commercial Popcorn Maker for the name of the nearest Service Center, or write to:



Waring Factory Service Center  
P.O. Box 3201  
314 Ella T. Grasso Avenue, Torrington, CT 06790  
(800) 492-7464

Ship Popcorn Maker for repair to the above address or to an Authorized Service Center. Do not ship to a Waring Sales Office.

Note: If your application involves the processing of biologically active material, we request that any items returned for service be sterilized before being shipped. Such items must be clearly identified as having been sterilized, both by a tag on the item itself and by a statement in the accompanying correspondence. Waring will not accept delivery of any return unless it is so identified.

Replacement parts for your out-of-warranty repairs are obtainable at the below address.

### LIMITED ONE-YEAR WARRANTY

Waring warrants every new Waring® Commercial Popcorn Maker to be free from defects in material and workmanship for a period of one year from the date of purchase when used with foodstuffs, nonabrasive liquids (other than detergents) and nonabrasive semi-liquids, providing it has not been subject to loads in excess of the indicated rating. In addition, the motor in this appliance has a full three year warranty.

Under this warranty, Waring will repair or replace any part which, upon our examination, is defective in materials or workmanship, provided the product is delivered prepaid to the Waring Service Center at: 314 Ella T. Grasso Ave. Torrington, CT 06790, or any Factory Approved Service Center.

This warranty does not: a) apply to any product which has become worn, defective, damaged or broken due to misuse or due to repairs or servicing by other than the Waring Service Center or a Factory Approved Service Center, or due to abuse, misuse, overloading or tampering; or b) cover incidental or consequential damages of any kind.

The one year warranty is applicable only to appliances used in the United States or Canada; this supersedes all other express product warranty or warranty statements. For Waring products sold outside of the U.S. and Canada, the warranty is the responsibility of the local importer or distributor. This warranty may vary according to local regulations.

Warning: This warranty is void if appliance is used on Direct Current (D.C.)



WARING COMMERCIAL  
314 Ella T. Grasso Ave.  
Torrington, CT 06790

## NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

©2007 Waring Commercial  
Waring® is a registered trademark of Waring  
314 Ella T. Grasso Avenue, Torrington, CT 06790

Printed in China

Any trademarks or service marks of third parties used herein  
are the trademarks or service marks of their respective owners.

07WC30105

IB-7999